



300 Cannery Row, Monterey, CA 93940, USA
www.lightandmotion.com



Learn more about the Sola® Nightsea and Fluoro Diving at:
www.lightandmotion.com

905-0387-A



Nightsea Flip3 Camera Filter


.....
QUICK GUIDE



Installing The Flip 3 Filter onto the GoPro Hero3 Housing

STEP 1 LOOSEN THE BOLT

Use the provided hex key to loosen the bolt. This will allow for easy installation.

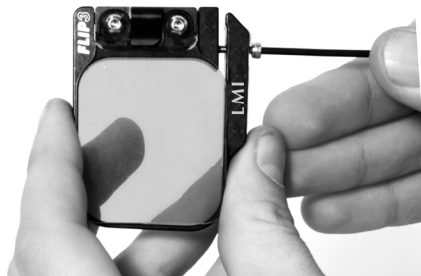


STEP 2 SNAP THE FILTER IN PLACE

With the filter closed, align the frame to the bottom of the GoPro lens. Press on the filter to snap it in place.



STEP 3 VERIFY FILTER IS FLUSH TO FRAME

The filter will not sit flush if the frame is pressed too far down on the GoPro lens. Re-seat the frame if necessary.

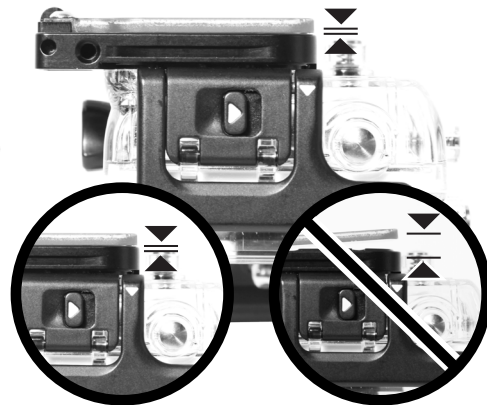

STEP 4 ALIGN EDGES & TIGHTEN BOLT

Gently push the sides together until the bottom frame edges are aligned. Then tighten the bolt to 100%.

